

Add Freedom Scooters Inc.

GD-20

Owner's Manual



Add Freedom Scooters Inc.
www.AddFreedomScooters.ca
1-800-SCOOTER

Table of Contents

Page 2 - Feature Guide

Page 3 - Product Specifications

Page 4 - Operation of Scooter

Page 7 - Charging and Battery Maintenance

Page 8 - Ramps and Curbs

Page 9 - General

Page 9 - Use While Under Influence

Page 9 - Safety Requirements

Page 11 – Warranty




Technical Specifications

Model	GD-20
Weight Capacity	300Lbs
Speed:	Up to 15mph
Distance:	21 miles per charge (distance varies on terrain, riders weight, road surface, etc.)
Front Seat: Type	Executive Comfort Seat with Backrest
Front seat: Size	10" x 10" x 8" (LxWxH)
Seat Cushion Height:	28" From Floor
Rear Seat: Type	N/A
Rear Seat: Size	N/A
Steering Height	42" From Ground
Rear Foot Rest:	N/A
Power:	Electric 48 volts
Watts:	500 Watts
Motor Type:	Hub Brushless Motor
Amps:	12 AH
Volts:	48 Volts
Dimensions:	55" x 26" x 38" (LxWxH)
Floor Clearance:	7"
Back Basket:	11"x 20" x 10" (DxWxH)
Batteries:	(4) 12 volt 12 amp hour SLA
Forward/Reverse switch:	Yes
High/Medium/Low Speed switch:	Yes
Front tire size:	13" x 5.0"
Rear tire size:	110/50-6.5
Charger:	48-volt Smart Charger Required
Throttle Type:	Variable Twist Throttle
Key Start:	Yes
Braking System:	Rear Disc Brakes, Front Drum Brake
Drive System:	500w hub motor
Headlight:	LED light
Rear lights:	N/A
Carton Size:	63" x 36" x 54"
Scooter Weight:	128lbs
Battery Indicator:	Yes
Front Suspension:	Yes
Rear Suspension:	Yes
Electric Horn:	Yes
Warranty:	1 Year Warranty

Operation of Scooter:

1. Turning on the power

Insert key into ignition and turn clockwise to turn the scooter on. The battery indicator will display the current charge level when on. Turn the key counter-clockwise to power off when stopped.

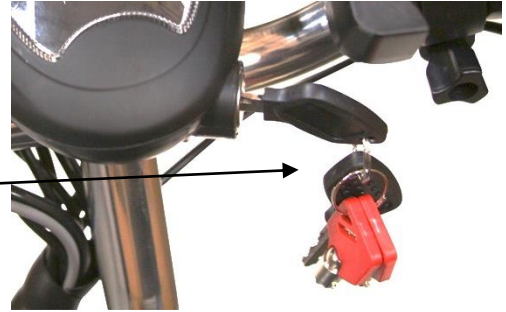

2. Speed Control

The black twist grip throttle controls acceleration. Twisting the throttle grip towards you will increase the speed. Releasing the throttle grip will reduce the speed gradually while on a level surface. The top speed capable is controlled by the three-position speed switch.

Three Position Speed Switch

- "1" – Limits the top speed to around 6 MPH
- "2" – Limits the top speed to around 10 MPH
- "3" – Allows the machine to travel full speed




3. Battery Power

The current charge level will be displayed when the scooter is turned on. The displays lights will not show when the scooter power is turned off.



4. Horn

There is a green horn button on the left side of the handlebars. Press button to sound the horn.

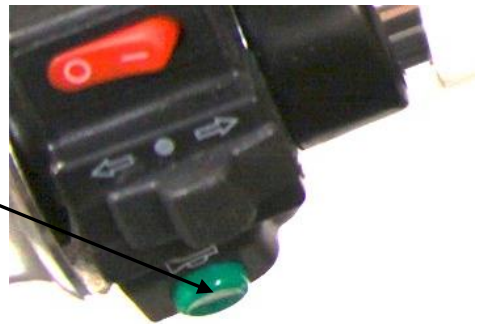


5. Headlight Switch

The headlight is controlled with the ignition key position. Turn the key one more time to the right when the scooter is in the on position to turn the headlight on.



6. USB Charging

There is a USB port on the handlebar assembly to be able to recharge any electronic device that accepts a 5-volt input. Plug the USB cord in the USB slot, and plug the desired device in to charge.

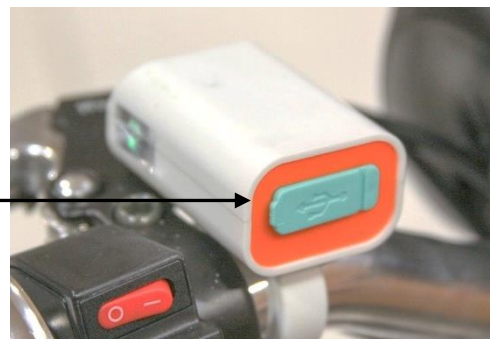

7. Handlebar Folding Clamp

The handlebars can be folded when storing or when loading into a vehicle. To fold the handlebars, slide the black retaining clip out of the silver handlebar folding clamp handle. Then, pull the clamp handle away from the handlebar assembly. The handlebars do not lock when folded.



8. Swiveling Seat

The seat can swivel to be able to get on and off the machine easier. Use the handle located on the right-hand side, right underneath the seat to swivel as needed.



9. Forward and Reverse Switch

The forward and reverse switch is located on the left-side handlebar assembly, right after the turn signal switch.

“O” – Is Forward

“I” – Is Reverse



Charging Instructions:

When the light on the charger is red, the scooter is still charging. When the light turns green, this means the scooter is fully charged. Once fully charged, unplug within two hours to avoid overcharging.

The charging time varies depending on how charged the batteries are. If almost empty, the charge time may take up to 8 hours. If the red lights stay on for more than 8 hours, unplug the charger.

Batteries and Battery Maintenance:

Only use sealed lead acid batteries that are deep cycle and maintenance free for your scooter.

Battery Type: (4) 12 volt, 12 AH Maintenance Free, Deep Cycle, Sealed Lead Acid.

Note:

- Do not use lithium ion batteries. They are not designed to be in this scooter.
- The useful life of a battery is quite often a reflection of the care it receives.
- Always charge the batteries in a well-ventilated area.
- The charger is intended for indoor use only.
- Replace all batteries at the same time if weak.
- If the scooter will not be used for an extended period, arrange to have the batteries recharged at least once every month to avoid deterioration of the batteries.

Ramps and Curbs:

1. Check that the ramp surface is roughened to prevent slipping. Never drive across a slope or turn sharply on a slope.
2. When driving up curbs, always check the height of the curb to ensure that it does not exceed 3" height.
3. Always go forward up ramps and curbs.
4. Avoid stopping completely when going over small objects or obstructions.

General:

1. Always keep your feet on the scooter.
2. Do not exceed the weight capacity of 300lbs.
3. Do not attempt to lift or move the scooter by any of its removable parts. Personal injury and damage to the scooter may result.
4. Never try to use your scooter beyond its limitations as described in the manual.
5. Do not operate your scooter if it is not functioning properly.
6. Do not connect any electrical or mechanical device to the scooter. Failure to obey this instruction may result in injury and will void the warranty.
7. Always comply with local laws and regulations.
8. It is very important that charger plug is inserted and plugged firmly into charger port for electrical power charging.
9. Always inspect the scooters mechanical components and tires prior to operation.
10. Know and practice the rules of safe and responsible riding.

Use While Under the Influence of Medication or Alcohol:

1. Check with your physician if you are taking any medication that may affect your ability to operate your scooter safely.
2. Do not operate your scooter while you are under the influence of alcohol as this may impair your ability to operate your scooter in a safe manner.

Safety Requirements:

Driving Surface

The GD-20 Scooter is a stable ride and performs best under the normal driving conditions (dry level ground with concrete or asphalt). **Extra care must be taken when riding on other surfaces** (grass, gravel, sand, mud, etc.).

DO NOT exceed the specified climbing angle. Do not operate the scooter before you have fully read and understood the manual.

- Always turn the scooter off and set the emergency brake before getting on or off the scooter.
- Avoid driving in loose gravel, covered soil, and sandstone.
- Do not drive the scooter in unknown road conditions.
- The scooter can ride over small obstacles within a certain height, but you must minimize the speed and slowly drive over the obstacle.
- Do not operate the scooter under the influence of drugs or alcohol.
- Do not park on steep slopes.
- Changing the initial setting of refitting your scooter is forbidden.

- Use caution when operating near busy streets, markets, or shopping centers. Do not operate in unsafe areas.
- Consult local authorities about the traffic rules for scooters in your city.
- Hold the handlebars with both hands and put both feet on the scooters floorboard always while operating the scooter.
- Never sit on the scooter in a moving vehicle.
- Do not operate on uneven slopes or uneven ground; be careful when passing over slopes.
- Never take the scooter on an escalator.
- Do not operate on frozen, slippery, or salty roads.
- Never let the batteries freeze; do not charge when frozen.
- Make sure the batteries are fully charged before operating.
- Do not let the batteries every go completely dead. When low, do not let sit for an extended period or damage may occur.
- Always use required safety equipment while operating.
- Do not modify or change the electrical system and frame. Doing so will void the warranty.

Warranty:

For valid warranty claims AFS Inc. will, at their discretion, replace/repair/refund items mutually agreed to be defective.

Add Freedom Scooters Inc. Warranty

1. Electronic components: (1) year limited warranty.
2. Controllers: (1) year limited warranty.
3. Batteries: Not warranted
4. Consumables: Not warranted (Tires, tubes, seat cushions, etc)
5. Warranty includes labour costs. Unit must be brought to our service location at your expense.

Any damaged or defect of any nature occurring from the misuse of the product is not to be covered. The warranty is to start from the date of arrival of our product.

Add Freedom Scooters Inc. assumes no responsibility and will not be held liable in any way for any injuries sustained by the purchaser / driver of this vehicle. The driver assumes all personal risks and risks of injury to others through accidents or misuse of this vehicle. **Drive Safely at All Times.** Always be Alert when you Drive.

Add Freedom Scooters Inc.
www.AddFreedomScooters.ca
1-800-SCOOTER